

PDM Defined Variables for Dispatch Reference

String Functions

<u>Menu Name</u>	<u>Syntax Format</u>	<u>Link to Help</u>
• Left	Left(abc, 2)	Link
• Right	Right(abc, 2)	Link
• Mid	Mid(abc, 1, 2)	Link
• Length	Length(abc)	Link
• Reverse	Reverse(abc)	Link
• Find	Find(abc, b)	Link
• ReverseFind	ReverseFind(abc, b)	Link
• CurrentTime	CurrentTime(%%Y-%%m-%%d %%H:%%M:%%S)	Link

Arithmetic Functions

<u>Menu Name</u>	<u>Syntax Format</u>	<u>Link to Help</u>
• Add	Add(3, 2)	Link
• Sub	Sub(3, 2)	Link

Userdefined Variables

- Lists any variables created for use by the action internally.

File Variables

<u>Menu Name</u>	<u>Syntax Format</u>	<u>Link to Help</u>
• Name of selected file(s)	%NameOfSelectedFile%	Link
• Path to selected file(s)	%PathToSelectedFile%	Link
• Directory of selected file(s)	%DirOfSelectedFile%	Link
• Current revision of selected file(s)	%CurrentRevisionOfFile%	Link
• Current version of selected file(s)	%CurrentVersionOfFile%	Link
• Selected file(s) current workflow state	%SelectedFileCurrentWorkflowState%	Link
• Name of user who created selected file(s)	%NameOfUserCreatedFile%	Link
• Time when selected file(s) was created	%TimeFileCreated%	Link
• Time when selected file(s) was modified	%TimeFileModified%	Link
• Current configuration	%CurrentConfig%	Link

Individual Variables

<u>Menu Name</u>	<u>Syntax Format</u>	<u>Link to Help</u>
• Path to SOLIDWORKS PDM root folder	%RootFolderPath%	Link
• Current folder path	%CurrentFolderPath%	Link
• Name of current folder	%NameOfCurrentFolder%	Link
• Name of current vault	%NameOfCurrentVault%	Link
• Name of logged-in user	%NameOfLoggedInUser%	Link

Serial Number

- Lists all serial numbers that have been created within the vault. [Link](#)

Reuse Serial Number

- Lists all serial numbers that have been created within the vault. [Link](#)